Product data sheet 34.110

# EGH 110...112: Duct transducer, relative humidity and temperature


# How energy efficiency is improved

Precise measuring of humidity for energy-efficient control of HVAC installations and monitoring energy consumption

## **Features**

- · Measures the relative humidity and temperature in air ducts
- · Measurement by means of fast capacitive measuring element
- · Active and passive measuring element
- · Immersion depth 140 mm
- · Mounting flange supplied

# **Technical data**

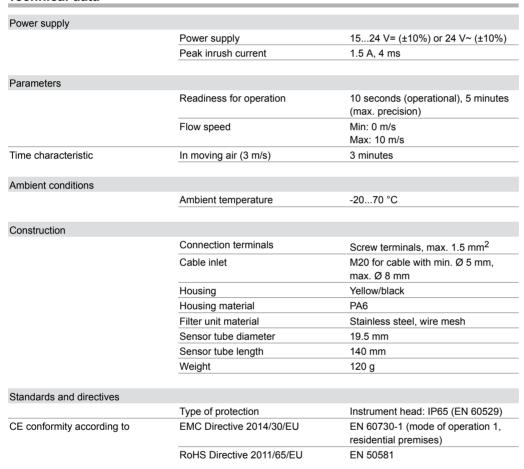

Overview of types				
Туре	Power consumption	Output signal	Measuring range, temperature	Measuring accuracy, humidity
EGH110F041	Max. 1 W (24 V=)	2 × 420 mA (max. load 500 $\Omega$ )	-2080 °C	0100% rh, no condensation
EGH111F031	Max. 0.4 W (24 V=)   0.8 VA (24 V~)	2 × 010 V (min. load 10 kΩ) + Ni1000	-2080 °C	0100% rh, no condensation
EGH112F031	Max. 0.4 W (24 V=)   0.8 VA (24 V~)	$2 \times 010 \text{ V (min. load } 10 \text{ k}\Omega)$	-2080 °C	0100% rh, no condensation

# **Description of operation**

Duct transducer for measuring relative humidity and the temperature in ventilation ducts. Humidity measurement:

A fast capacitive measuring element measures the relative humidity and a measuring amplifier converts it to a 0...10 V standard signal.

Temperature measurement:



# EGH11\*F0\*1





Product data sheet 34.110

EGH 111: With Ni1000 temperature sensor. Characteristic as per DIN 43760.

EGH 112: The temperature of -20...80 °C is converted to a 0...20 mA standard signal.

#### Intended use

This product is only suitable for the purpose intended by the manufacturer, as described in the "Description of operation" section.

All related product regulations must also be adhered to. Changing or converting the product is not admissible

## **Engineering and fitting notes**



#### CAUTION!

Damage to device!

► Electrical devices may only be installed and fitted by a qualified electrician!

#### **Electrical connection**

When you are laying the cables, note that electrical interference can affect the measurements. These effects increase the longer the cable and the smaller the conductor cross-section. In high-interference environments, we recommend using shielded cables.

On devices with controlling units (signal generators, transmitters etc.), it must be ensured that the device receiving the signal (actuator or other equipment) does not enter a damaged or dangerous state as a result of faulty signals during assembly and configuration of the control unit. Completely disconnect the signal receiver from the power supply if necessary.

#### Heat caused by dissipated electric power

Temperature sensors with electronic components are always subject to a certain amount of power loss, which affects the temperature measurement of the ambient air. In active temperature sensors, the higher the operating voltage, the greater the power loss. This power loss must be taken into account in the temperature measurement. At a fixed operating voltage (±0.2 V), this is normally done by adding or subtracting a constant offset value. The duct transducers have a variable operating voltage, but due to the way they are manufactured, only one operating voltage can be taken into account. As standard, the transducers are set to an operating voltage of 24 V=. This means that, at this voltage, the expected measurement error of the output signal is smallest. At other operating voltages, the offset error increases or diminishes due to the change in power loss of the sensor electronics. If recalibration directly on the sensor becomes necessary during later operation, this can be done using the trimmer potentiometer on the sensor circuit board.


## **Fitting**

The sensor can be fastened using the mounting flange (recommended) or directly on the ventilation duct

If there is a possibility of condensation in the sensor tube or the immersion sleeve, make sure to install the sleeve so that any condensation can run off.

# Notes for users

Air circulation may lead to particles of dirt and dust settling on the sintered filter that protects the measuring elements, which in turn may prevent the sensor from functioning properly.

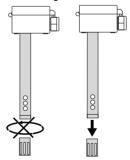

After the filter has been dismantled, it can be cleaned by blowing it out using oil-free, filtered, compressed air, ultra-pure air, nitrogen or by rinsing it with purified water. Very heavily soiled filters should be replaced. In normal ambient conditions, we recommend a maintenance interval of 1 year in order to be able to ascertain the specified level of precision. It may be necessary to recalibrate or replace the humidity sensor at an earlier date if it is used in an area with a high ambient temperature and high Product data sheet 34.110


levels of humidity as well as in corrosive gases such as chlorine, ozone or ammonia. In these cases, recalibration or a possible sensor replacement are not subject to the general guarantee.


# Disposal

When disposing of the product, observe the currently applicable local laws.

More information on materials can be found in the Declaration on materials and the environment for this product.

# **Connection diagram**

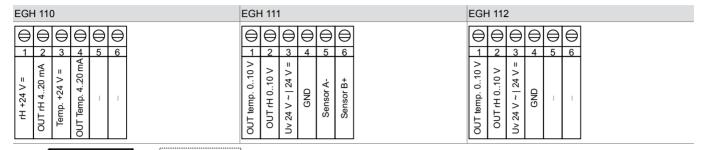

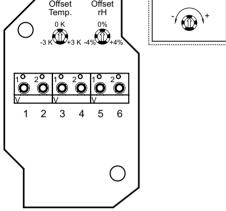


Note for EGH 110:


The humidity output must be connected to ground/GND in order to use the active temperature output.

# **Dimension drawing**

[mm]

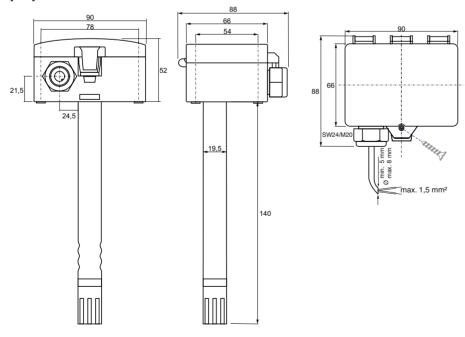

Product data sheet 34.110

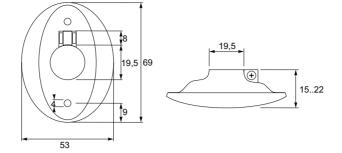

Fr. Sauter AG Im Surinam 55 CH-4016 Basel Tel. +41 61 - 695 55 55 www.sauter-controls.com